


Remote Valve HRV spare parts list

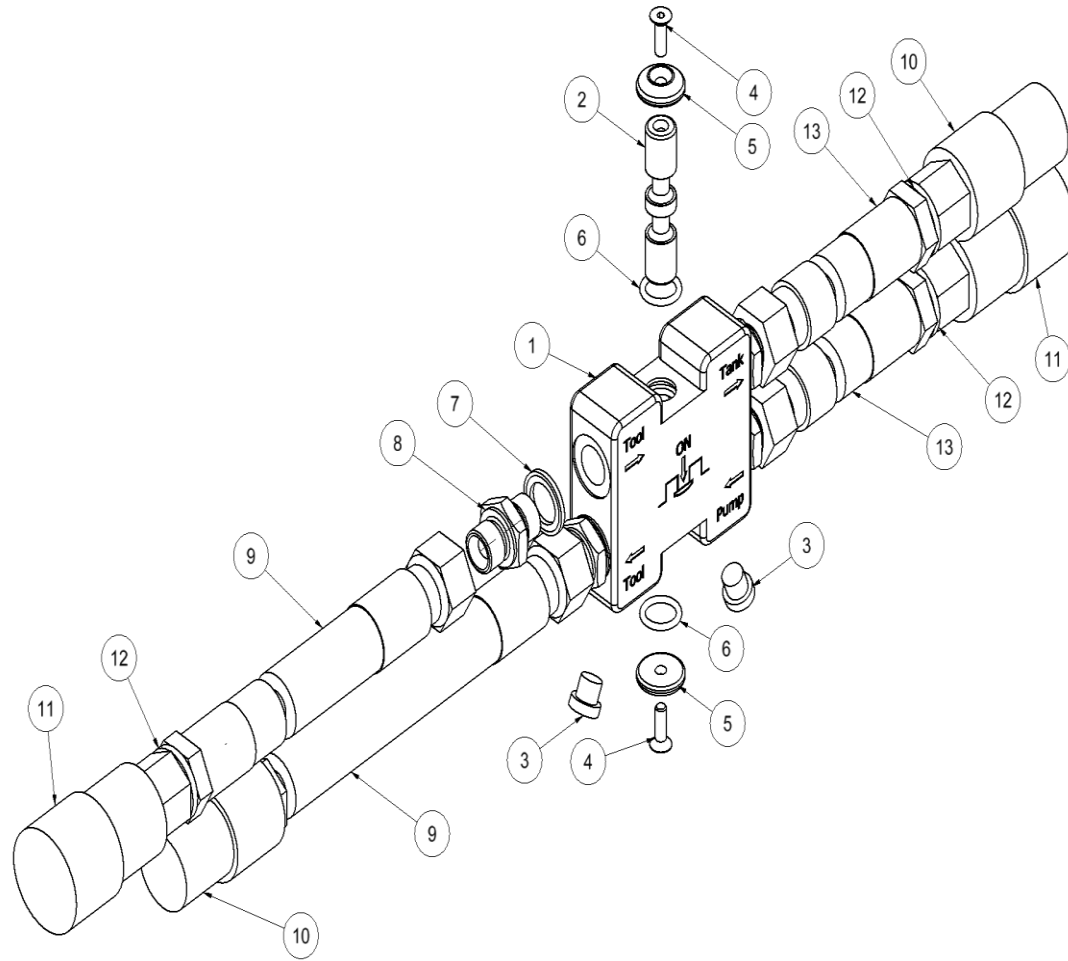

Pos.	Part No.	Description	Pcs.
1	8232806	Valve block	1
2	8232807	Spool	1
3	7621323	Pipe plug 1/8" w/seal	2
4	7632810	Screw M5x16	2
5	8232809	Alu. Washer	2
6	7532812	O-Ring Ø14x2,5	2
7	7521017	Seal ring 3/8"	4
8	7421771	Fitting 3/8"x3/8"	4
9	7431815	3/8" tail-hose set 2 m	1
10	7401141	Q.R. coupling 1/2" BSP Male	2
11	7401142	Q.R. coupling 1/2" BSP Female	2
12	7521072	Seal ring 1/2"	4
13	4142313	3/8" tail-hose-set 0.3 m	1