


# HPD Post Driver spare parts list

## From Serial No. 13110

Fig. 1

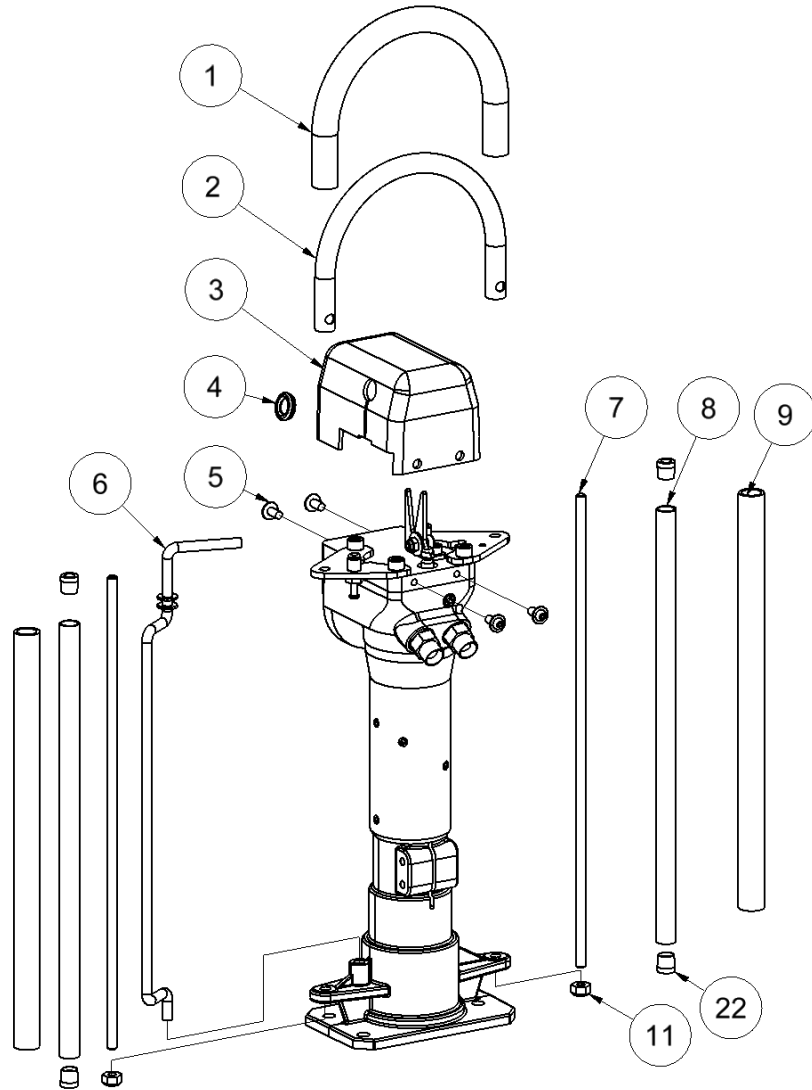


Pos.	Part No.	Description	Pcs.
1	7731447	Handle cover <i>Incl. in part No. 9012564 - not sold separately</i>	
2	9012564	Top handle	1
3	8712573	Top cover	1
4	7722412	Rubber grommet	1
5	7611282	Screw M8x16	4
6	8212731	Trigger lever	1
7	8612728	Threaded rod <i>Loctite 638</i>	2
8	9012730	Handle (435.5 mm)	2
9	7731447	Handle cover <i>Incl. In part No. 9012730 - not sold separately</i>	
11	7621027	Nut M10	2
22	8212589	Guide bushing <i>Incl. In part No. 9012730</i>	4

# HPD Post Driver spare parts list

## From Serial No. 13110

Fig. 2

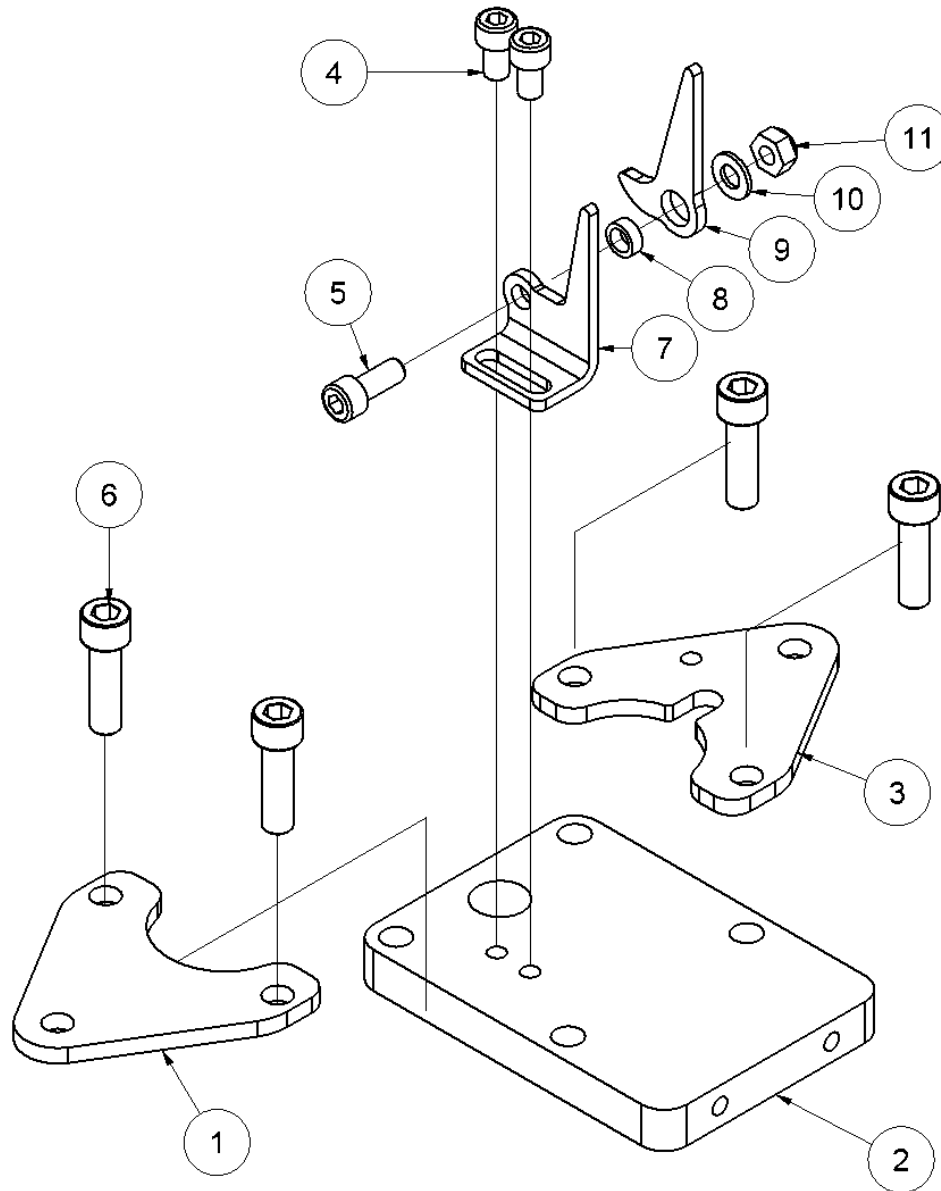


Pos.	Part No.	Description	Pcs.
1	8212588	Handle plate left	1
2	8212557	Top plate	1
3	8212566	Handle plate right	1
4	7631395	Screw M8x14 <i>Loctite 243</i>	2
5	7611634	Screw M8x20	1
6	7612558	Screw M10x35 <i>Loctite 243 - 80 Nm</i>	4
7	8212559	Trigger bracket	1
8	8212561	Distance bushing	1
9	8212560	Trigger plate	1
10	7621171	Washer M8	1
11	7621010	Lock nut M8	1

# HPD Post Driver spare parts list

## From Serial No. 13110

Fig. 3

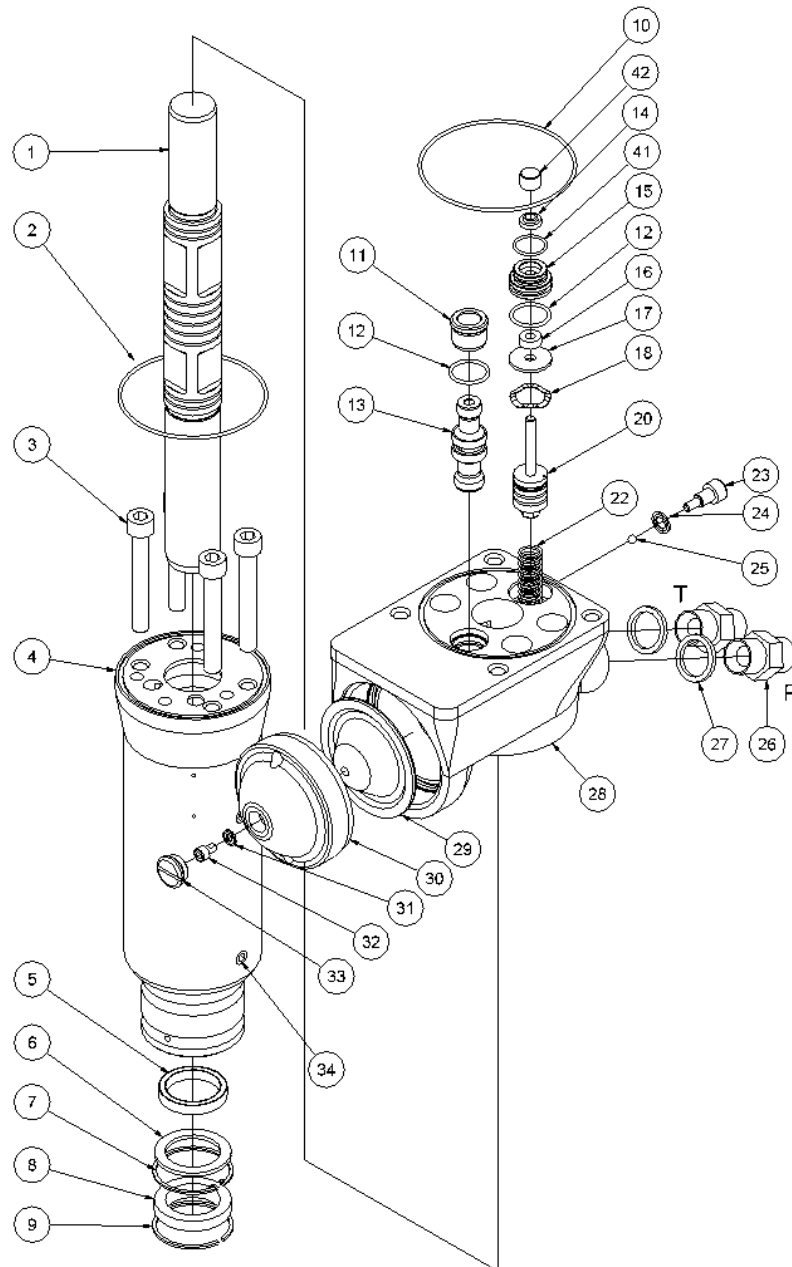


Pos.	Part No.	Description	Pcs.
-	4141358	1/2" tailhose-set 0.3 m	1
-	7401141	Q.R. coupling 1/2" BSP male	1
-	7401142	Q.R. coupling 1/2" BSP female	1
1	8212123	Striking piston	1
2	7511247	O-ring 82x2	1
3	7611244	Screw M10x70 <i>Tighten crosswise 20-40-80 Nm</i>	4
4	9012130	Cylinder	1
5	7511232	Seal $\varnothing 32/\varnothing 40 \times 6$	1
6	8211223	Supporting washer $\varnothing 32.7 \times 45 \times 2.5$	1
7	7611229	Retaining ring	1
8	7511234	Rod wiper	1
9	7611230	Spring ring	1
10	7511246	O-ring 88x2	1
11	8211228	Sleeve	1
12	7511248	O-ring 20x2	2
13	8211200	Spool HH23/HH25 30 l.p.m.	1
14	7521013	Seal	1
15	8211226	Seal housing	1
16	7521014	Seal	1
17	8211251	Washer	1
18	7611252	Crinkled spring washer 23.8x17.3x0.3	1
20	9011750	Trigger piston complete	1
22	8611249	Compression spring 1.25x12.5x62.5	1
23	8611255	Screw M8 f/lock nut	1
24	7511254	Seal ring M8	1
25	7611253	Ball $\varnothing 5$ mm	1
26	7421063	Fitting 1/2"x1/2" BSP <i>Only for tail-hoses with female thread</i>	2
27	7521072	Seal ring 1/2"	2
28	8212121	Valve housing	1
29	7711091	Diaphragm	1
30	8211216	Accumulator cover	1
31	7511268	Seal ring M5	1
32	8611269	Screw M5 f/accumulator <i>Loctite 243</i>	1
33	8211256	Plug	1
34	7621037	Pipe plug 1/8" <i>Loctite 542</i>	4
41	7511300	O-ring 17x1.5	1
42	8211227	Distance piece	1
-	9011379	Seal kit	1

# HPD Post Driver spare parts list

## From Serial No. 13110

Fig. 4

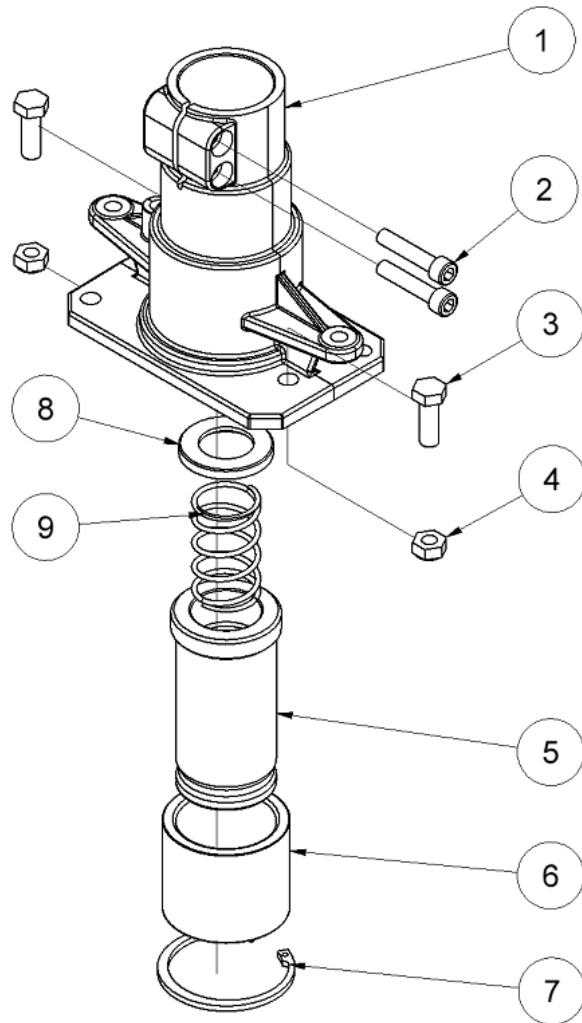

Pos.	Part No.	Description	Pcs.
1	8212831	Nose part	1
2	7611238	Screw M10x50 <i>Loctite 243 - 40 Nm</i>	2
3	7621330	Screw M12x35	2
4	7631990	Lock nut M12	2
5	8212568	Anvil	1
6	8212569	Bushing	1
7	7612571	Retaining ring 80x4	1
8*	8213408	Spring guide	1
9*	7613407	Spring	1

\*Installed on HPD from SN: 17414